



777 TRIGGER / SEAR ASSEMBLY.

AFTER ASSEMBLY, THE SEAR CAN BE COCKED BY PRESSING BACK ON THE TOP PART OF THE SEAR UNTIL IT CLICKS. THIS PREVENTS THE SEAR FROM COMING OUT OF PLACE AS THE ASSEMBLY IS BEING INSTALLED INTO THE GUN. AFTER THE ASSEMBLY IS INSTALLED THE TRIGGER MUST BE PULLED TO RELEASE THE SEAR SO THAT THE GUN

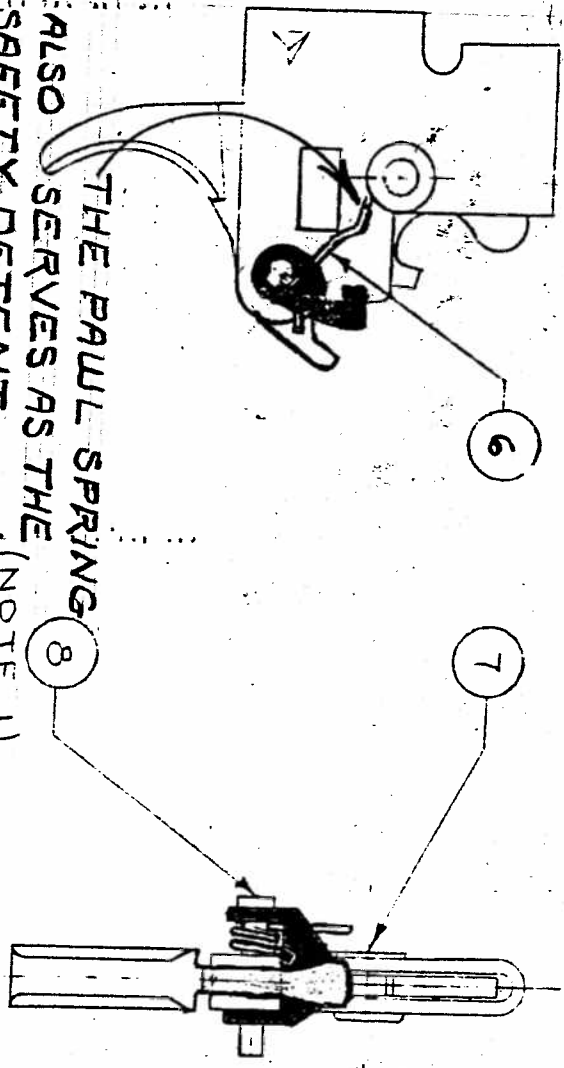

FRONT VIEW

THE PAWL SPRING (NOTE 1) ALSO SERVES AS THE SAFETY DETENT SPRING, AND MUST BE UNDER THE SAFETY AFTER THAT PART IS INSTALLED INTO THE GUN.

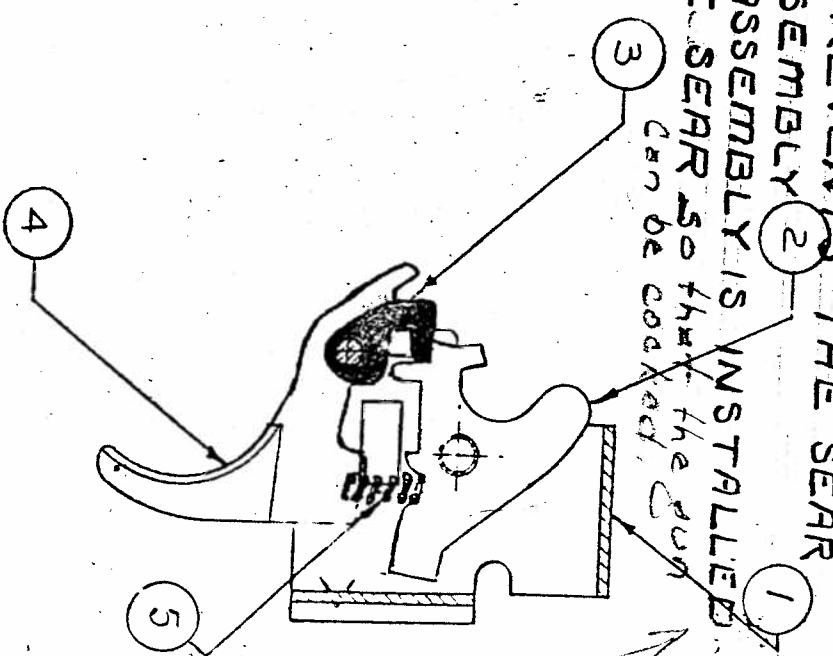

8	RIVET	34407-000	E-090002	1
7	EYELET	30111	A-01624	1
6	SPRING - PAWL	135546-000	B-09947	1
5	SPRING - TRIGGER / SEAR	34405-000	A-09949	1
4	TRIGGER with post	154603-000	C-09948	1
3	PAWL	53471-000	B-09936	1
2	SEAR	34404	G09871	1
1	SEAR PLATE (HOUSING)	53411	G09869	1

GENERAL NOTES:

UNLESS OTHERWISE SPECIFIED RIVET HEAD LOCATED ON SIDE SHOWN

Trigger Assembly 167932-000 Complete 5.00

Trigger Case w/Sear Plate 168015-000 5.00